

10

No. 5,6

OE SPORT BAR

REMOVE COMPONENT PARTS

11

12

12

No. 13 (9-12 Nm)

Extension nut

14

No. 12 (9-12 Nm)

15

13

16

16.1

16.2

16.3 Adjustment

No. 12 (9-12 Nm)

17

18


1 Foot

1 Foot

19


Off Road & Car Styling

Montaganeleitung Ford Ranger
Modell 2012 + 2016

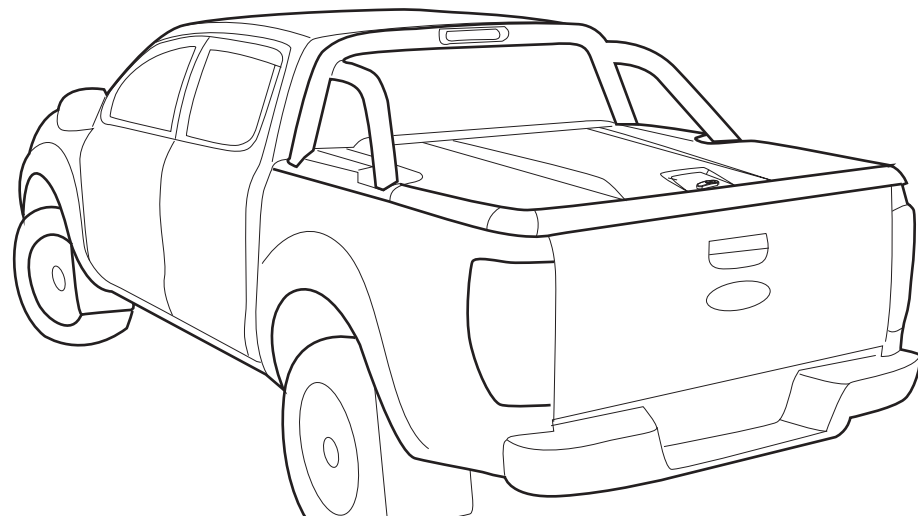


Artikelliste

No.	(COMPONENT PART)	(Q'TY)
1.	FRONT PANEL (DECK COVER)	1
2.	BODY (DECK COVER)	1
3.	SPORT BAR	1
4.	WIRE HARNESS FOR SPORT BAR	1
5.	WIRE HARNESS KIT FOR OE SPORT BAR	1
6.	SIDE SUPPOR BAR, RH/LH	1/1
7.	FRONT CLAMP	2
8.	REAR CLAMP	2
9.	MIDDLE CLAMP	2
10.	ASSY PLATE LOCK V2	2
11.	FRONT BRACKET FOR SPORT BAR RH/LH	1/1
12.	REAR BRACKET FOR SPORT BAR RH/LH	1/1
13.	FRONT RUBBER END TUBE RH/LH	1/1
14.	REAR RUBBER END TUBE RH/LH	1/1
15.	GAS STRUT	2
16.	EXTENSION NUT L15 mm.	4
17.	RUBBER SUPPORT FRONT PANEL	4
18.	COLLAR L15 (PINK COLOR)	2
19.	COLLAR L17 (BLUE COLOR)	2
20.	LINER TAPE	1
21.	RUBBER SHIM	1
22.	INSTALLATION MANUAL	1

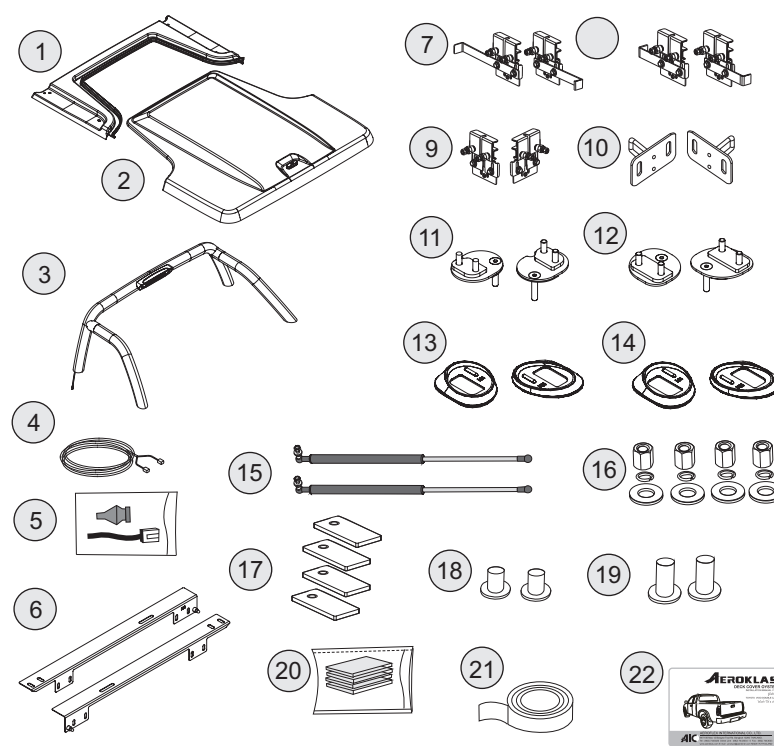


TOOLS

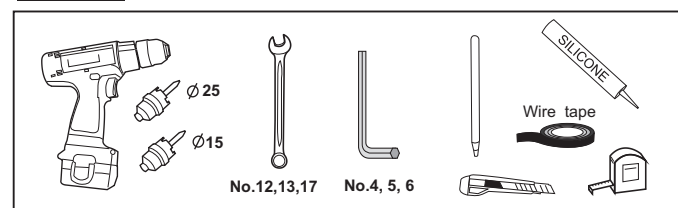



1 No. 4, 5

Remove OE sport bar



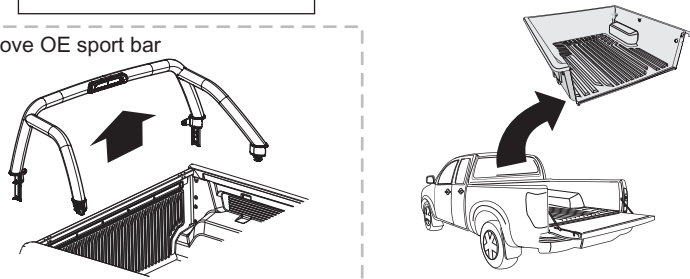


2 Unit (mm.)

Ø15 For Wire harness

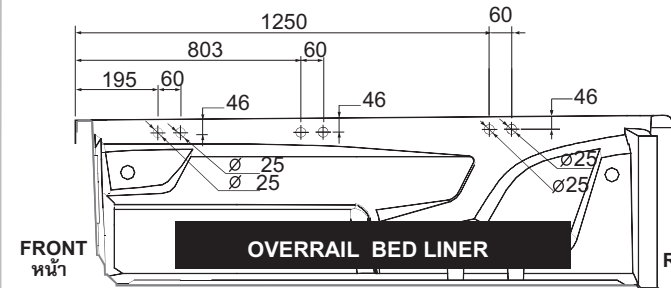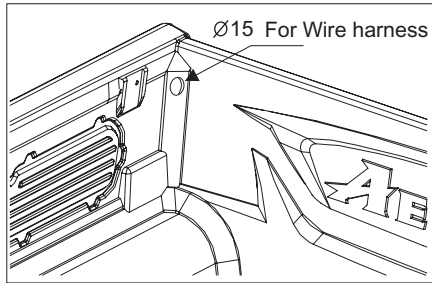

FRONT หน้า, REAR หลัง, UNDERRAIL BED LINER

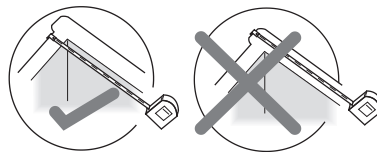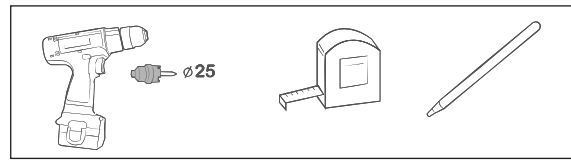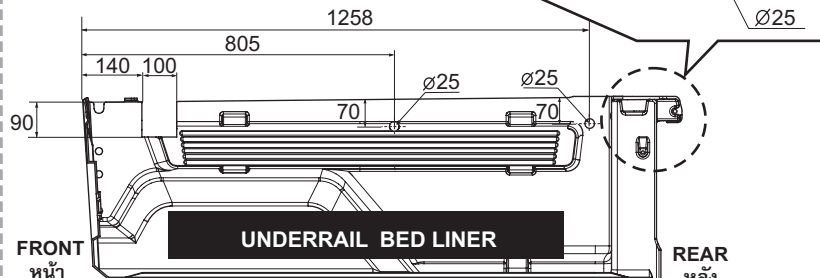


Ø25 mm.

ADVISE / ช้อนหน้า


3 Unit (mm.)

Attach Liner tape

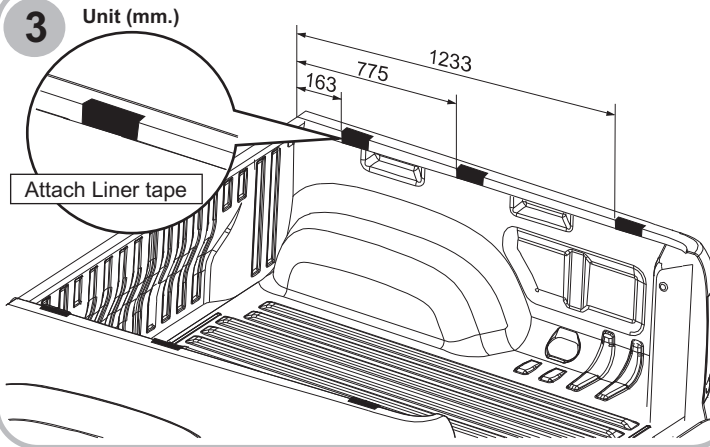


No. 12 (9-12Nm)


C

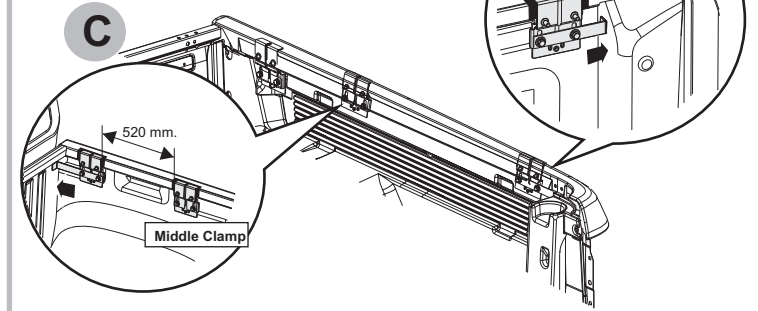

4 Underrail Bed liner

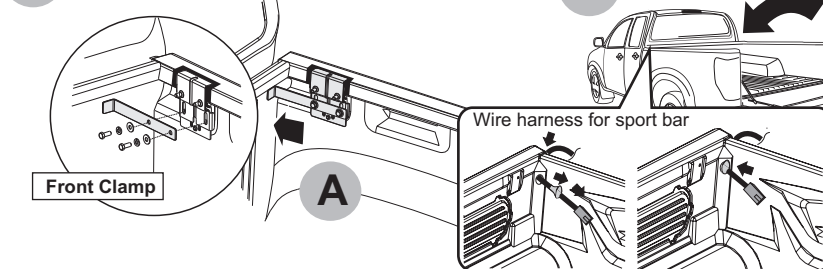


Overrail Bed liner

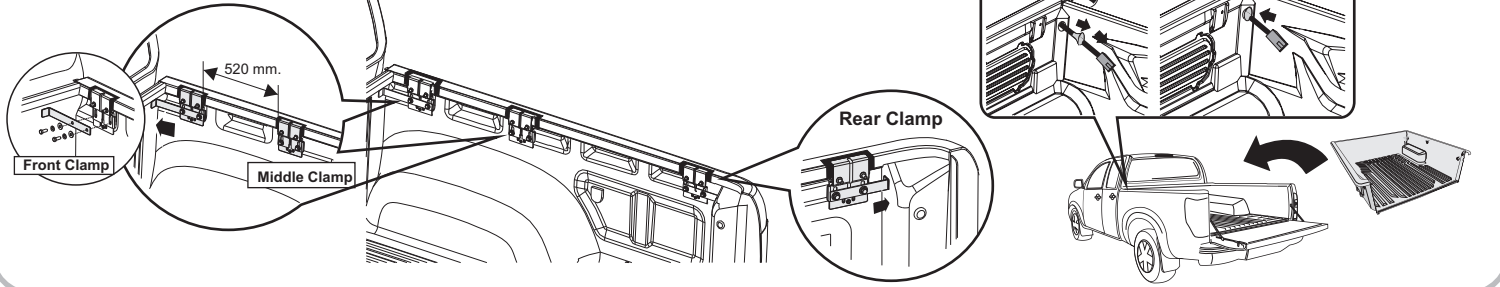


5 Wire harness for sport bar


----- = Cable Ties

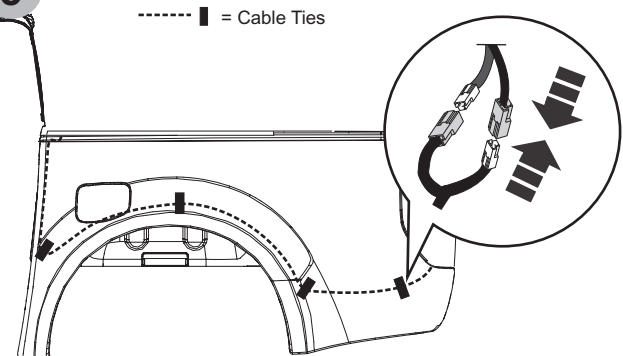

6




Sticker

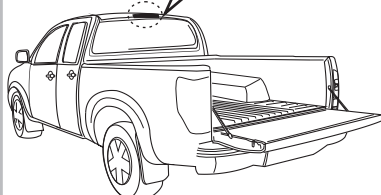

8

No. 12 (9-12 Nm)

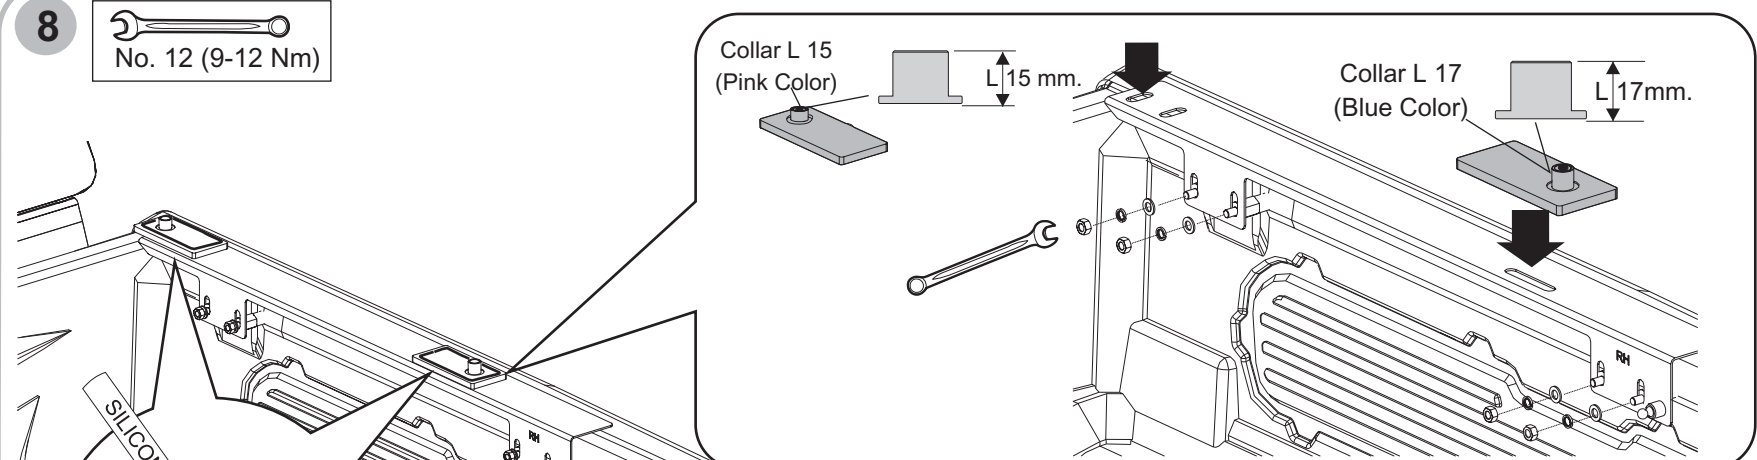


7

No. 17 (9-12 Nm)

Extension Bolt (L) 42 mm.

Extension Bolt (L) 32 mm.

EXTENSION BOLT

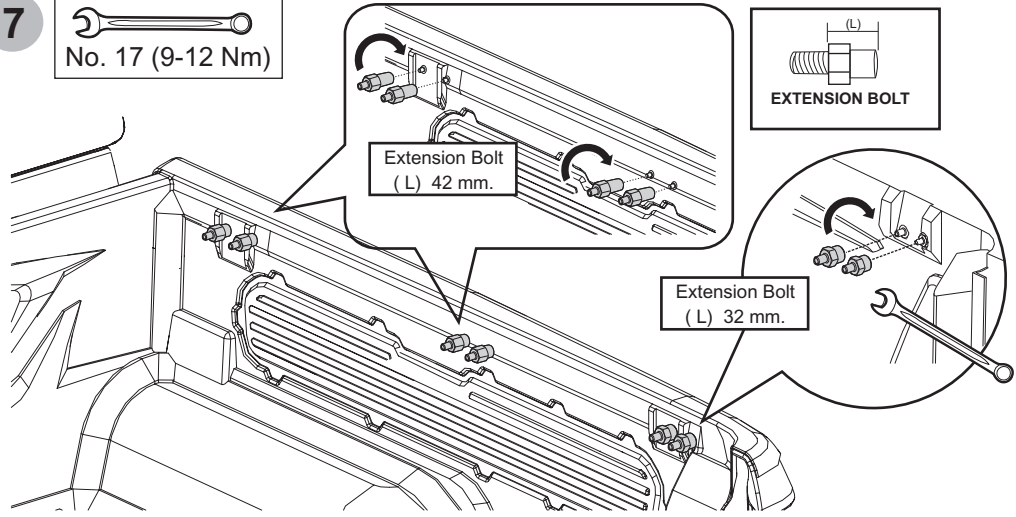

9

